


Setting the Timer

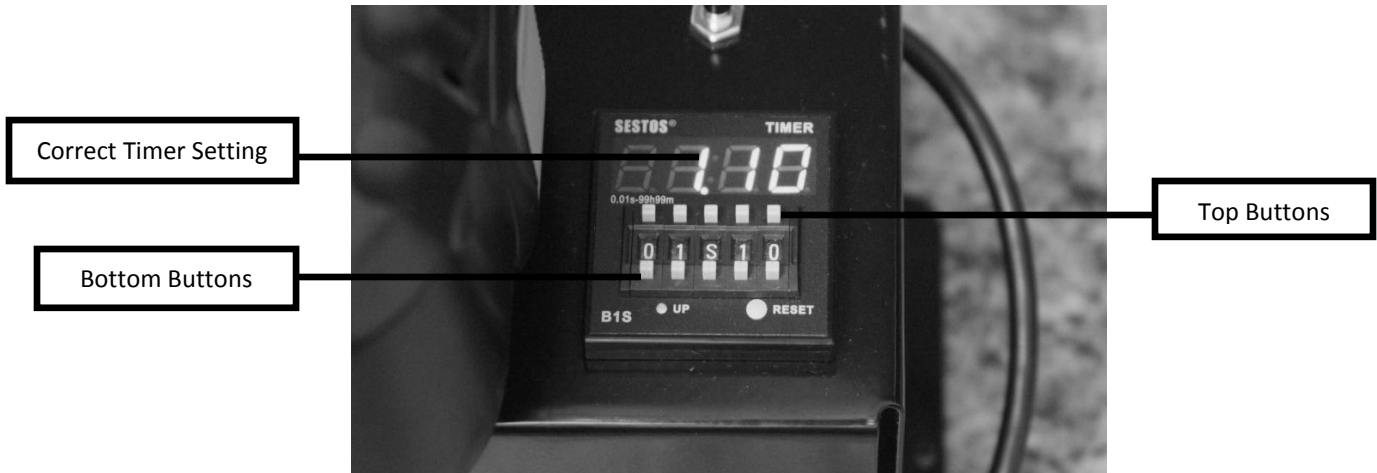

1. The Timer controls the length of time that liquid flows.
2. The Digital Timer is located on the top of the Power Box.
3. Set the Power Box on a hard surface with the label facing the operator.



4. Plug the Rechargeable Battery into the Power Box battery hole. DO NOT apply much force.



5. The preset time will be displayed on the Timer in red characters when the battery is properly connected to the Power Box. It should read 0 1 S 1 0, which dispenses for 1.1 seconds.
6. The Timer has 5 place holders:
 - a. # # A # #
7. The letters are:
 - a. S=seconds
 - b. S=seconds
 - c. S=seconds
 - d. M=minutes
 - e. M=minutes
 - f. H=hours
 - g. H=hours
8. For communion trays the alpha place should ALWAYS be set on S for seconds.

NOTE: ALWAYS verify that the Timer is on S WITHOUT an underline.

9. The Timer is preset to read 0 1 S 1 0, which dispenses for 1.1 seconds. If it has reset in shipping, set the Timer correctly.
 - a. There are top and bottom corresponding buttons for each place value.
 - b. The top numerical buttons decrease the time set on the Timer.
 - c. The bottom numerical buttons increase the time set on the Timer.
10. The preset time fills communion cups half way as long as the liquid level in the Juice Container is maintained within the Fill Range, the top and bottom screws.
 - a. When the liquid level goes below the bottom screws the flow of liquid from the Juice Container decreases.
 - b. When the liquid level goes above the top screws the flow of liquid from the Juice Container increases.