

Dispensing

NOTE: In order to avoid disrupting communion preparation to reset the Timer, maintain the liquid level in the Juice Container within the Fill Range, the top and bottom screws. At this Fill Range the Timer must be set at 0 1 S 1 0, which dispenses for 1.1 seconds, to fill communion cups half way.



After following directions for *Assembling* on pages 36-42 the System is ready to use.


1. With the communion cup tray in place push the Button located on the Power Box. Juice will dispense.



2. Remove the full tray from underneath the Juice Container through one of the side openings.



3. To position the communion tray filled with cups under the Juice Container, slide the tray through one of the side openings.
 - a. If using the *Permanent Communion Tray Alignment Solution* pull the tray against the two front Legs and spin the tray counter clockwise until the tray locks against the Guide Leg.

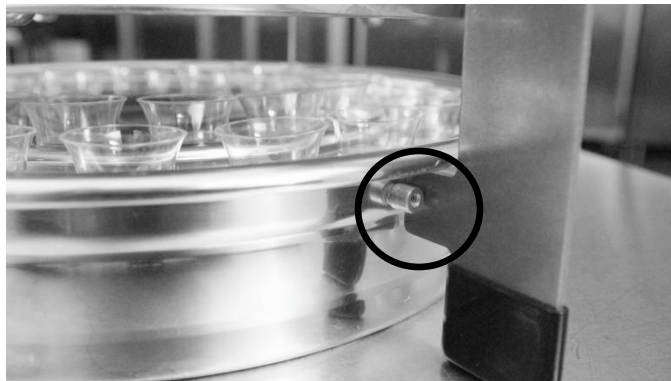

- b. If using the *Permanent Communion Insert Marking Solution* or the *Recurring Communion Insert Marking Method* pull the tray against the two front Legs and turn the tray until the mark on the insert lines up with the Guide Leg.



4. With the communion cup tray in place push the Button located on the Power Box. Juice will dispense.



5. Remove the full tray from underneath the Juice Container through one of the side openings.



6. Remember to check the liquid level throughout the dispensing process.
7. Repeat steps 3-6 until all the cups have been filled.

NOTE: Because there will be drips, a communion tray filled with cups should be positioned under the Juice Container at the beginning of the assembling process and removed from under the Juice Container after communion preparation is completed.

8. Leave the prepared communion cup tray under the Juice Container until the power source has been disconnected.

